

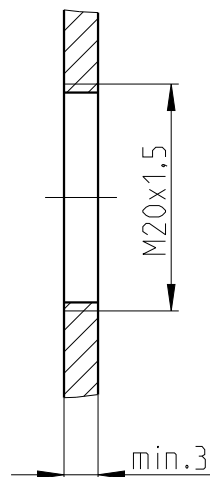
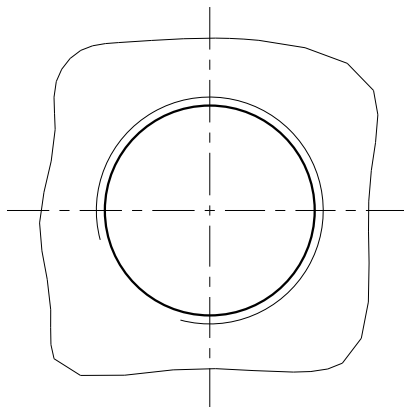


Installation recommendation M20x1,5 for SACC.... design E

mounting with o-ring
(thread without chamfer)
can be screwed from the front

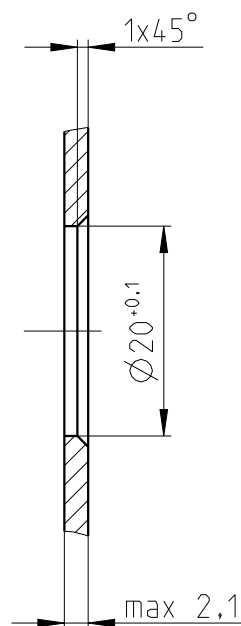

mounting with o-ring
(pass-through hole with chamfer)
can be screwed from the back

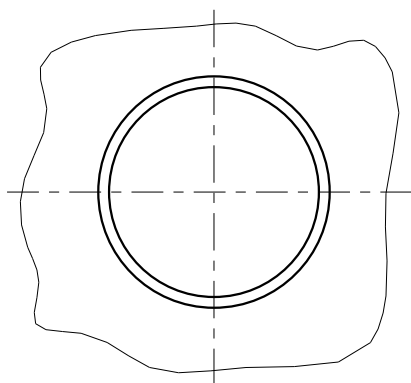

tightening torque: 3-4Nm



technical changes reserved

doc.-no.: 00674484

Index 2 / 2012-07-24

	data	name
design	2012-07-24	Thumm