



Installation recommendation M16x1,5 for SACC.... design E


mounting with flat gasket
(thread without chamfer)
can be screwed from the front

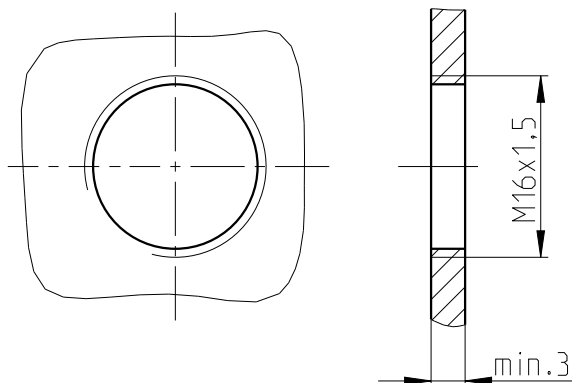


mounting with o-ring
(thread with chamfer)
can be screwed from the front

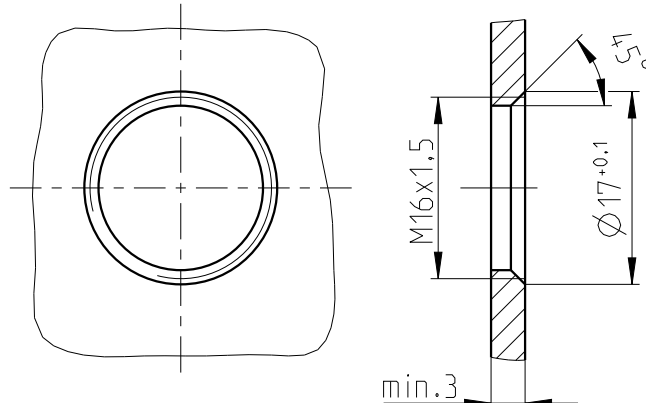


mounting with flat gasket
(through hole without chamfer)
can be screwed from the rear

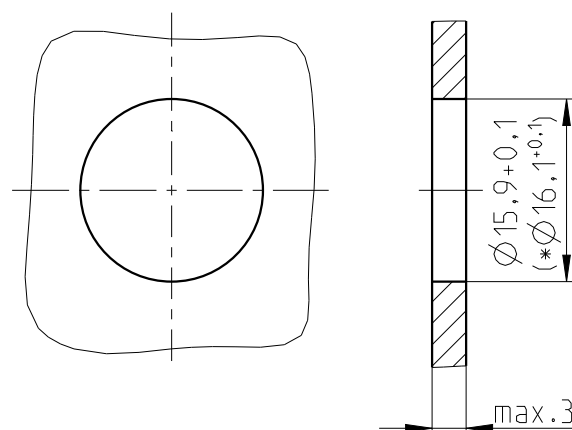

mounting with o-ring
(through hole with chamfer)
can be screwed from the rear

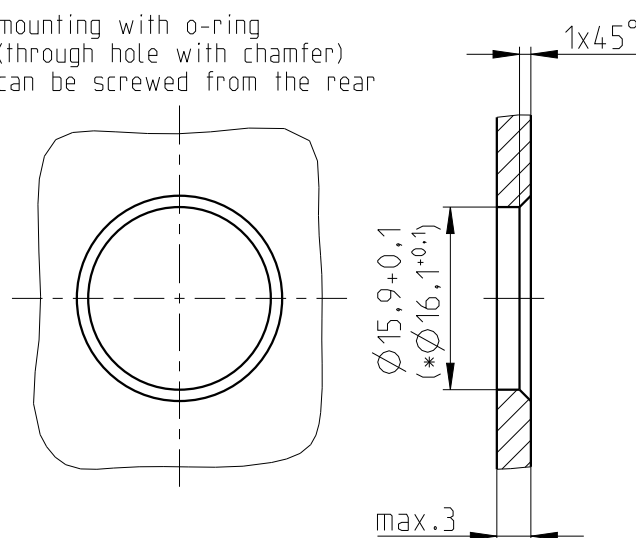

Mounting with flat gasket or o-ring
(cut-out with anti-twist protection without chamfer)
can be screwed from the rear

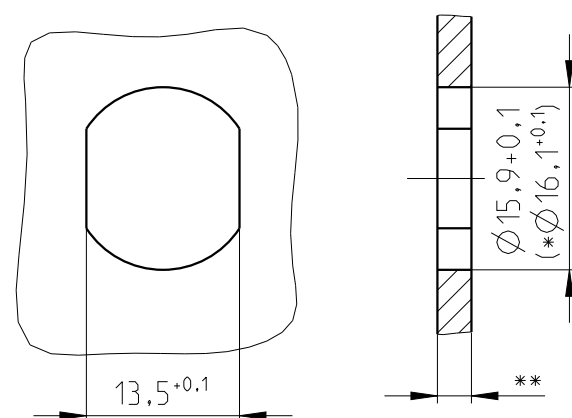

Installation recommendation only valid for housings
with bevels (anti-twist protection)!

- * $\varnothing 16,1+0,1$ at centered mounting
- ** Front panel thickness max.3mm.
If <2mm technical features
could be limited.

tightening torque:
2-3Nm

	data	name
design	2012-07-24	Thumm



technical changes reserved

doc.-no.: 00674461

Index 4 / 2021-03-02